

# T-PH08 MANUAL

## Phone Holder



All information described in this manual is based on the test standard of Takeway®. Sorry for the inconvenience caused if there are any printing errors. The design and specifications of this product are subject to change without notice.

Copyright: All Rights Reserved



### EHOMA INDUSTRIAL CORPORATION

TEL:+886-4-2406 5031  
info@takeway.tw  
www.takeway.tw

215xxx/EN 12/2024

# T-PH08 MANUAL

## Phone Holder

Before using the product for the first time, please read through the user guide.

Please use this product correctly after fully understanding the contents of the user guide.

T-PH08 Phone holder can combine with the Takeway® Clampod , Clamping Arm with Ballhead Base or Fork Stem Phone Mount.


1

Installation of the shock-absorbing pad:

### 2-1 Installation of the shock-absorbing pad:

The user can decide whether to use the shock-absorbing pad or not, based on the phone case's thickness. Take off the releasing paper on the shock-absorbing pad. Place the combined piece on the phone holder bed.

Ensure your phone is placed within the grooved rubber padding area of the jaws.

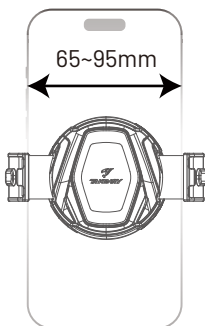

Fits mobile phones (with case)  
9mm to 15mm thick

Fig. 1


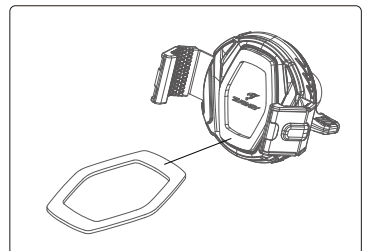


Fig. 2

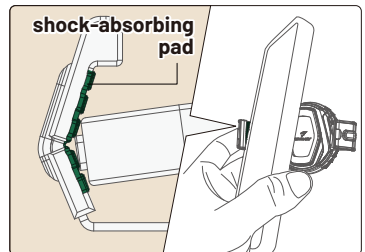


### Attention!

The shock-absorbing pad are NOT necessary to install. It depends on your phone thickness including the phone case. The most important is to make sure your smartphone is seated

**CLOSELY INTO THE PHONE HOLDER** before any further operation. A vacant space may increase the damage risk when riding and using the phone holder.

Close-fitting

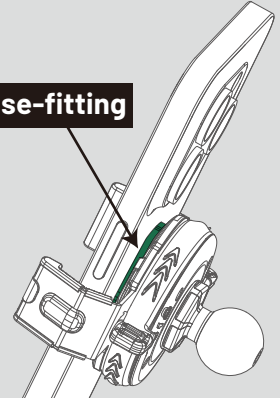

## 2

### Installation of the phone holder

#### Mounting the Phone

-Insert your phone into the holder. Push it against the right jaw and apply pressure to the right. The both jaws will open symmetrically.

-Once the phone is positioned, release the holder to secure it in place.

-Rotate the rear safety lock to Position 1 to lock the phone in place.

-For additional security, rotate the safety lock to Position 2, applying extra pressure for a firm hold.

#### Removing the Phone

-Reverse the steps: Rotate the safety lock to Position 0 to unlock.

-Remove the phone by gently releasing it from the jaws.

Note: Always ensure the phone is securely fastened before riding to avoid accidents.

Note: When using the smart security lock, please do not put your finger between the clamping jaws (silver components) to avoid injury to your finger or compromise of the clamping strength.

Note: When using the smart security lock, please do not put your finger between the clamping jaws (silver components) to avoid injury to your finger or compromise of the clamping strength.

